
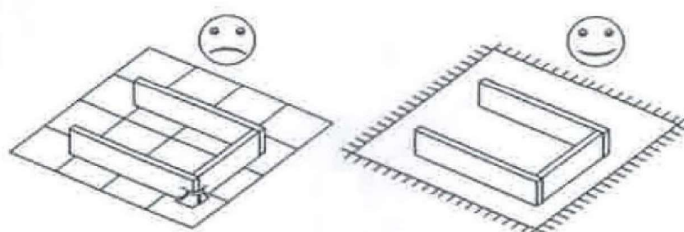
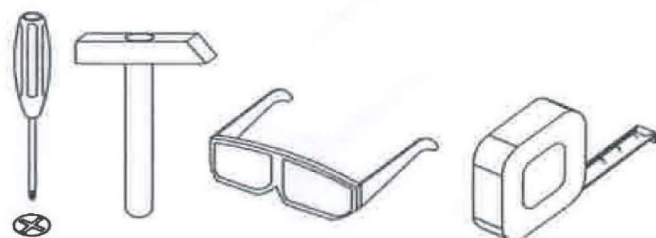
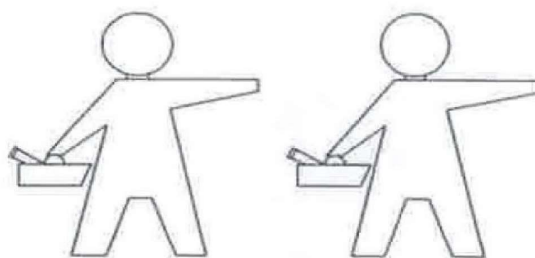


Chevet 13-04

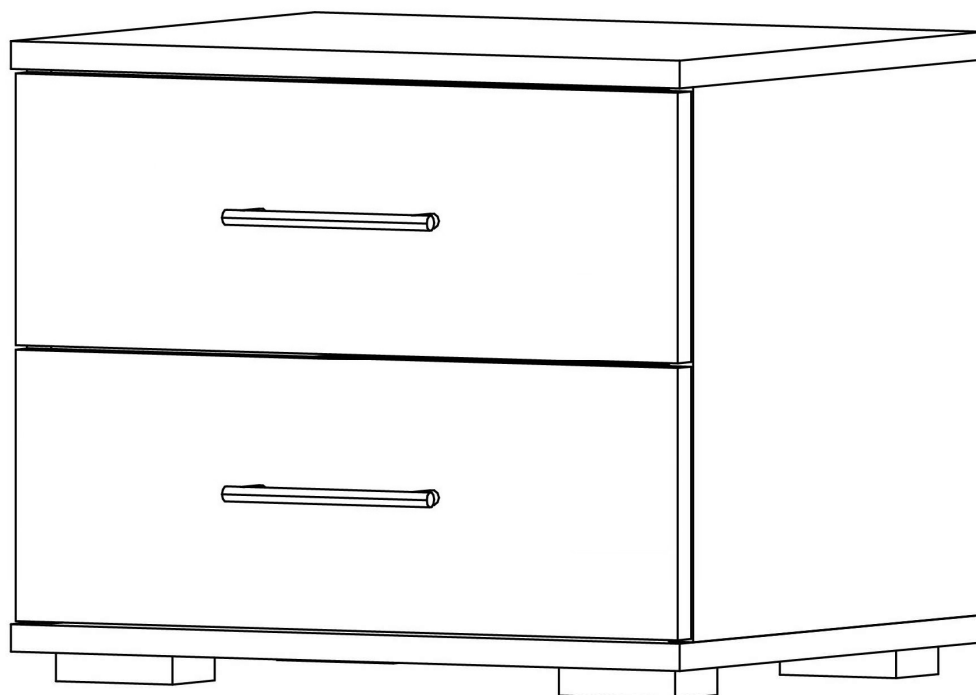

	designation		qte
		Glissière de guidage L- 350	2
		Clé de montage	1
D		Vis 7x50	8
C		Tourillon 8x35	12
B		Ferrure d'assemblage excentrique	16
b		Ferrure d'assemblage excentrique	16
E		Vis à bois 3.0X16	8
O		Vis à bois 3.5X16	32
e		Vis à bois 4x20	16
A		Pied de réglage	4

N ^o	dte	longueur (mm)	largeur (mm)
1	1	500	410
2	1	500	410
3	1	364	390
4	1	364	390
5	2	350	153
6	2	350	153
7	2	401	129
8	2	401	80
9	2	178	495
10	1	379	479
11	2	417	357

Croquis d'assemblage des attaches